


**NOTES:**

1. CENTER VALVE BOX OVER OPERATING NUT TO INSURE FREE VALVE OPERATION.
2. USE TELESCOPING VALVE BOX ON ALL VALVES.
3. SUPPORT VALVE BOX BOTTOM ON WELL COMPACTED BACKFILL. DO NOT ALLOW VALVE BOX TO REST ON ANY PORTION OF VALVE.
4. TELESCOPING VALVE BOXES ARE AVAILABLE FOR DEPTHS UP TO 6'10". C900 PVC RISERS WILL BE ALLOWED FOR DEPTHS GREATER THAN 7'.
5. USE BOXLOK OR VALVE BOX ADAPTOR II FOR CENTERING BOXES OVER VALVES.

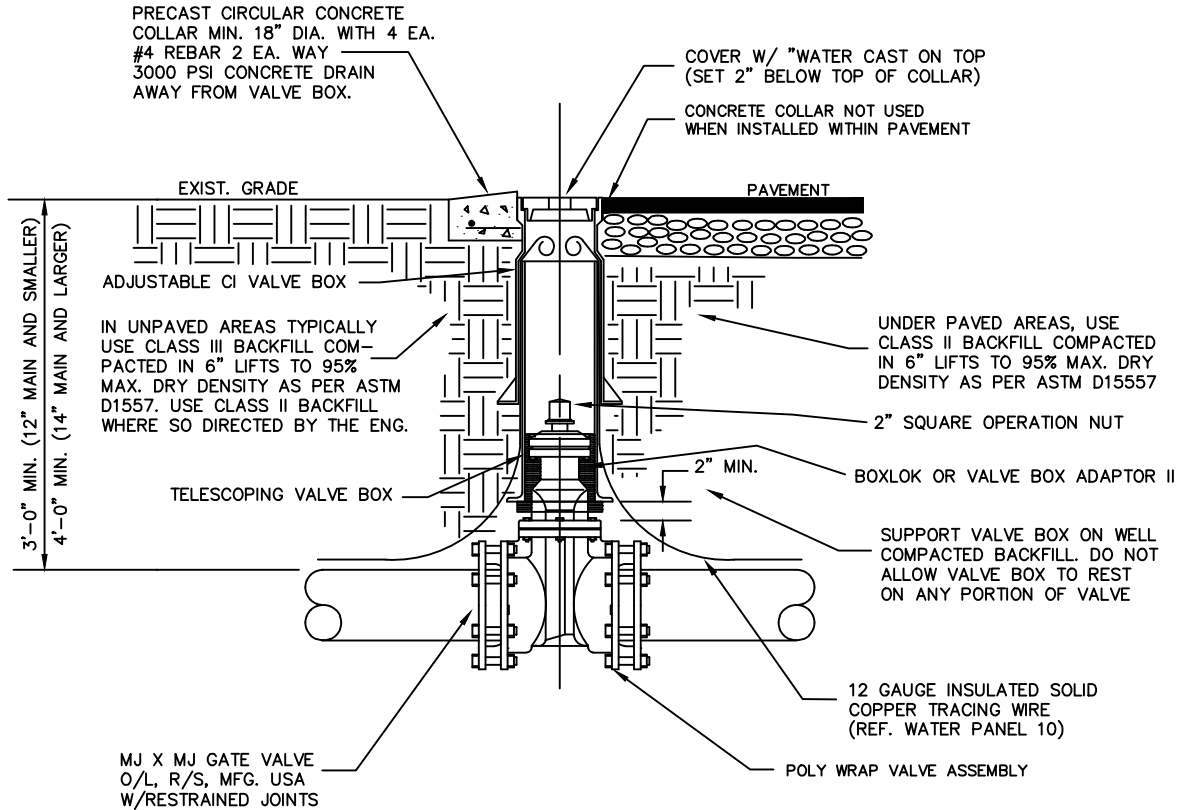

*TYPICAL VALVE*  
*AND VALVE BOX INSTALLATION DETAIL*

NOT TO SCALE

**WATER PANEL 3**

**BERKELEY COUNTY WATER AND SANITATION  
POTABLE WATER & SANITARY SEWER STANDARDS**

REVISED 04/25/2023