


NOTES:

1. CENTER VALVE BOX OVER OPERATING NUT TO INSURE FREE VALVE OPERATION.
2. USE TELESCOPING VALVE BOX ON ALL VALVES.
3. SUPPORT VALVE BOX BOTTOM ON WELL COMPACTED BACKFILL. DO NOT ALLOW VALVE BOX TO REST ON ANY PORTION OF VALVE.
4. TO BE USED ON ALL TAPS GREATER THAN 1".
5. USE BOXLOK OR VALVE BOX ADAPTOR II FOR CENTERING BOXES OVER VALVES.

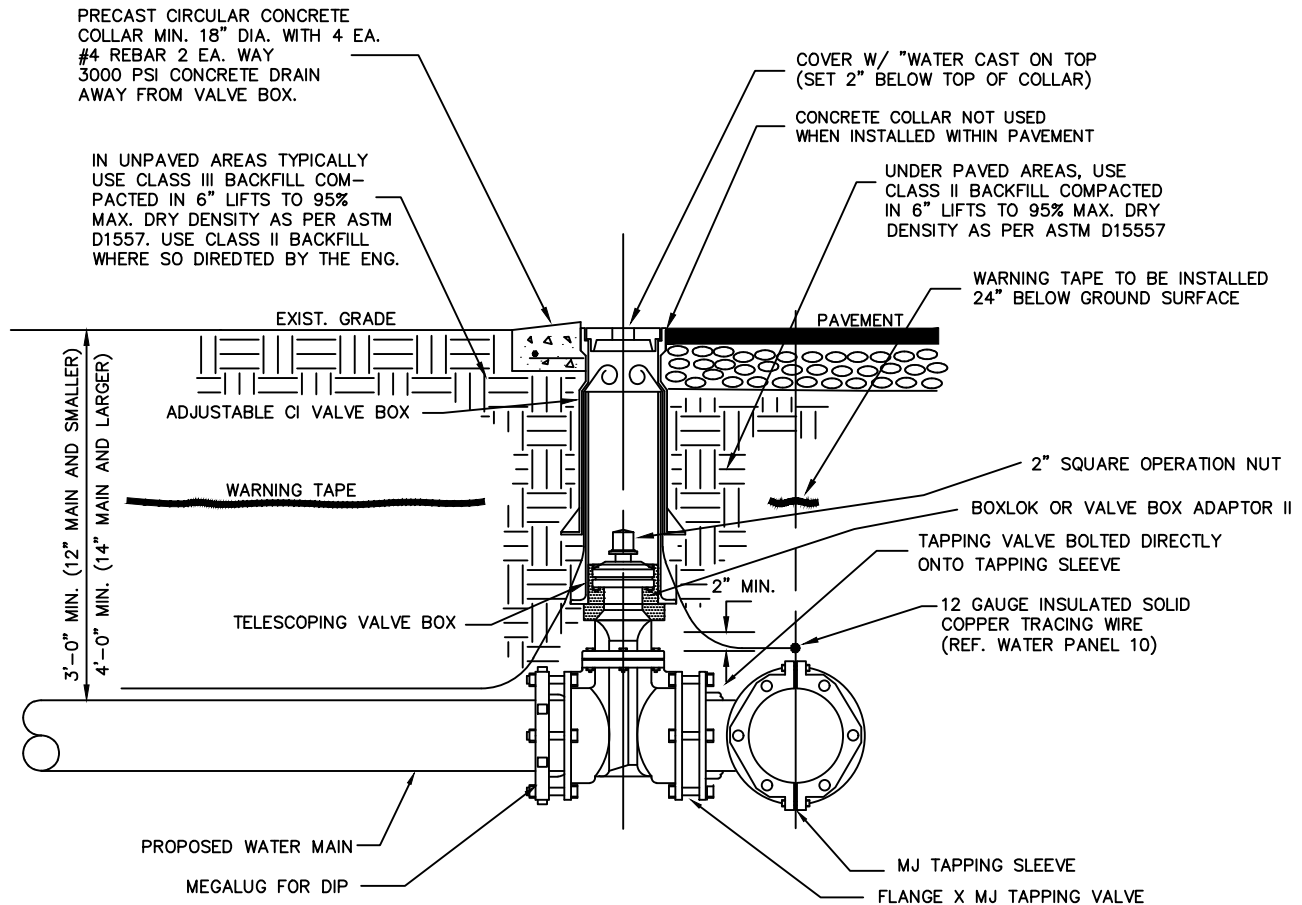

TYPICAL TAPPING
SLEEVE AND VALVE DETAIL

NOT TO SCALE

WATER PANEL 6

**BERKELEY COUNTY WATER AND SANITATION
POTABLE WATER & SANITARY SEWER STANDARDS**

REVISED 04/25/2023