


NOTES:

1. CENTER VALVE BOX OVER OPERATING NUT TO ENSURE FREE VALVE OPERATION.
2. USE TELESCOPING VALVE BOX ON ALL VALVES.
3. SUPPORT VALVE BOX BOTTOM ON WELL COMPACTED BACKFILL. DO NOT ALLOW VALVE BOX TO REST ON ANY PORTION OF VALVE.
5. USE BOXLOK OR VALVE BOX ADAPTOR II FOR CENTERING BOXES OVER VALVES.

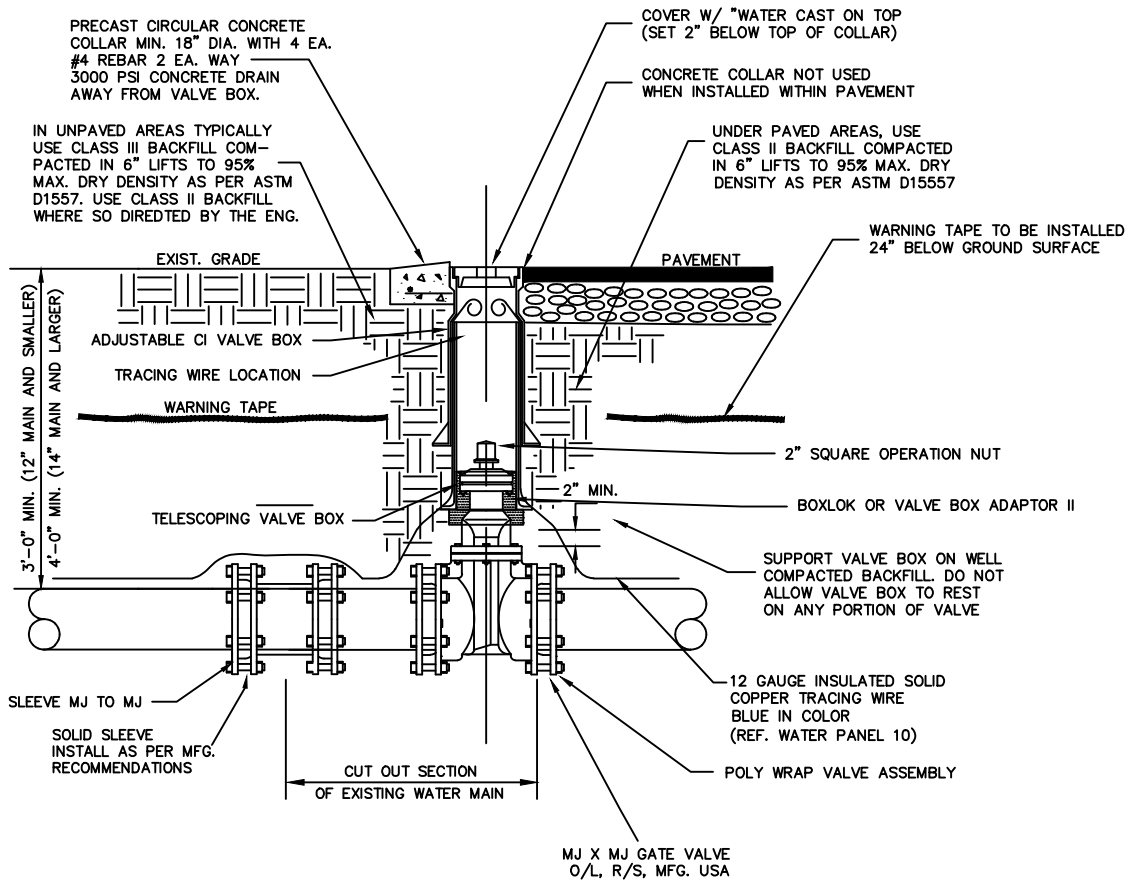

CUT-IN SLEEVE
AND VALVE INSTALLATION

NOT TO SCALE

WATER PANEL 7

**BERKELEY COUNTY WATER AND SANITATION
POTABLE WATER & SANITARY SEWER STANDARDS**

REVISED 04/25/2023