


**NOTES:**

1. CENTER VALVE BOX OVER OPERATING NUT TO INSURE FREE VALVE OPERATION.
2. USE TELESCOPING VALVE BOX ON ALL VALVES.
3. SUPPORT VALVE BOX BOTTOM ON WELL COMPACTED BACKFILL. DO NOT ALLOW VALVE BOX TO REST ON ANY PORTION OF VALVE.
4. TO BE USED ON ALL TAPS GREATER THAN 1" ON EXISTING WATER MAINS IN SERVICE WHERE CUT IN TEE AND VALVE CONFIGURATION IS NOT FEASIBLE/APPROVED BY BCWS.
5. USE BOXLOK OR VALVE BOX ADAPTOR II FOR CENTERING BOXES OVER VALVES.
6. VALVE NUT EXTENSIONS ARE REQUIRED ON VALVES 6" DEEP OR GREATER.

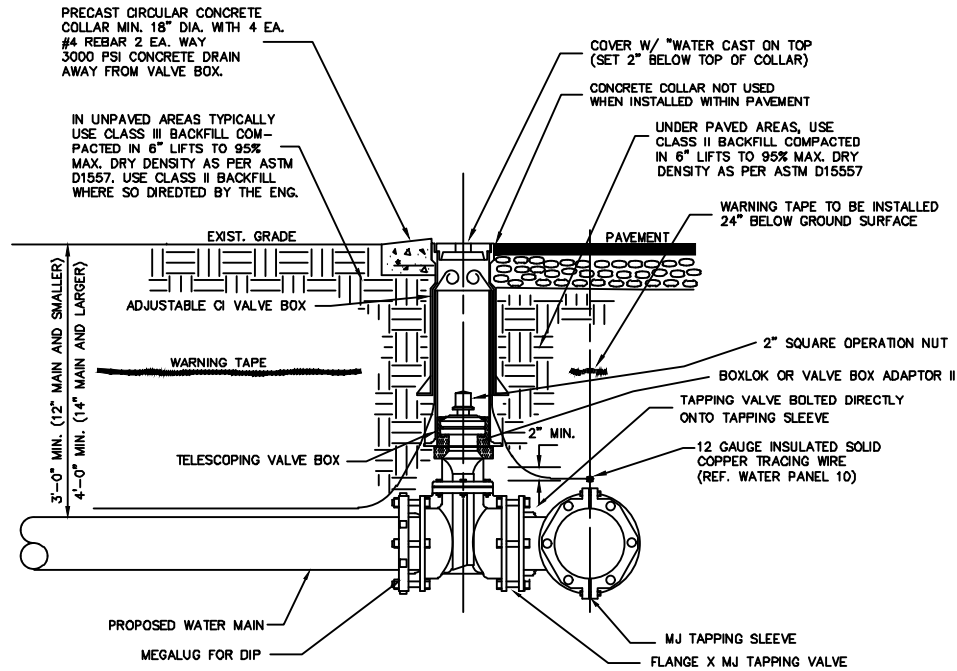

*TYPICAL TAPPING*  
*SLEEVE AND VALVE DETAIL*

NOT TO SCALE

**WATER PANEL 6**

**BERKELEY COUNTY WATER AND SANITATION  
POTABLE WATER & SANITARY SEWER STANDARDS**

REVISED JULY/2025